

Instruction Manual




			TIA/EIA T568A	TIA/EIA T568B	INDUSTRIAL
OK PIN	DESINGATIONS	1 2 3 6 4 5	White/Green Green	White/Orange Orange	Yellow Orange
			White/Orange Orange	White/Green Green	White Blue
			Blue White/Blue	Blue White/Blue	
JAC		7 8	White/Brown Brown	White/Brown Brown	


 Insert cable into screw type boot, strip off 1.2 inch of cable jacket, fold back the drain wire if use shielded cable.

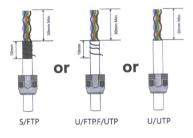

Pan out all four twisted pairs, following the color coding label and allocate each conductors into proper slots on wiring cap.
Trim the ends of conductors.




Remove the wiring label before place wiring cap on plug.

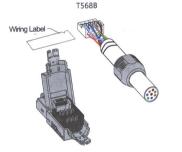

Place the wiring cap onto plug, use plier to clamp wiring cap until it completely snap-in to effect the connection.



Close plug cover, make sure the drain wire is in proper contact with grounding clip on plug.



6 Tighten screw type boot to close the plug.

